



INSTRUCTIONS

EU4014 / EU4015

Please Read These First

These instructions are intended as a guide only and are not a substitute for a workshop manual. The fitter must have a degree of mechanical competence. If you are in any doubt as to your ability to fit the part, do not undertake the job.

For more Technical Tips and to register your warranty online visit

www.fpuk.co.uk

Contact technical sales on

01527 835555

www.fpuk.co.uk

FEU401415

FIAT EU4014 / EU4015

- Disconnect the battery.
- Fit the new ECU.
- Reconnect the battery.
- Start the car, the immobilizer light should extinguish after 2 seconds.

If the engine warning light flashes at a constant rate once the car has been started the following procedure will need to be carried out.

- Allow the engine to fully warm up. (This is most important the temperature gauge must read above 80 degrees).
- Rev the engine to 5000 rpm and hold therefore two seconds.
- Allow the engine to idle for two seconds.
- Rev the engine to 5000 rpm and hold there for two seconds.
- Allow the engine to idle for two seconds.
- Rev the engine to 5000 rpm and hold there for two seconds.
- Allow the engine to idle.
- The warning lamp will now go out and the procedure is complete.

This procedure allows the new ECU to initialise its self-adaptive function